

| <b>Vendor</b> | <b>Model</b>  | <b>Interface type</b> |
|---------------|---------------|-----------------------|
| 4G SYSTEMS    | XS Stick W12  | USB                   |
| 4G SYSTEMS    | XS Stick W14  | USB                   |
| A-Link        | 3GU           | USB                   |
| AIKO          | 81D           | USB                   |
| AIKO          | 82D           | USB                   |
| AIKO          | 83D           | USB                   |
| Airplus       | MCD-650       | USB                   |
| Airplus       | MCD-800       | USB                   |
| Alcatel       | X060          | USB                   |
| Alcatel       | X060A         | USB                   |
| Alcatel       | X060S         | USB                   |
| Alcatel       | X200          | USB                   |
| Amoi          | V870          | USB                   |
| AnyData       | ADU-300A      | USB                   |
| AnyData       | ADU-310A      | USB                   |
| AnyData       | CDMA-450      | USB                   |
| AnyData       | ADU-500A      | USB                   |
| AnyData       | ADU-510A      | USB                   |
| AnyData       | ADU-520A      | USB                   |
| AnyData       | ADU-635WA     | USB                   |
| AnyData       | ADU-635WA     | USB                   |
| AnyData       | ADU-660       | USB                   |
| APBW          | WH200II       | USB                   |
| Apple         | IPhone 3GS    | Mobile Phone          |
| Apple         | IPhone 4      | Mobile Phone          |
| ASUS          | T600          | USB                   |
| AT&T          | Mercury       | USB                   |
| AT&T          | Quick Silver  | USB                   |
| Axesstel      | MV110         | USB                   |
| Axesstel      | MV140B        | USB                   |
| Axesstel      | MV242         | USB                   |
| BandRich      | BandLuxe C120 | USB                   |
| BandRich      | BandLuxe C170 | USB                   |
| BandRich      | BandLuxe C180 | USB                   |
| BandRich      | BandLuxe C270 | USB                   |
| BandRich      | BandLuxe C321 | USB                   |
| BandRich      | BandLuxe C331 | USB                   |
| BES           | WM61          | USB                   |
| BlackBerry    | 9000          | Mobile Phone          |
| CELOT         | CT-650        | USB                   |
| C-Motech      | CBU-450D      | USB                   |
| C-Motech      | CCU-550       | USB                   |
| C-Motech      | CDU-550       | USB                   |
| C-Motech      | CDC-680       | USB                   |
| C-Motech      | CGU-628A      | USB                   |
| C-Motech      | CGU-629       | USB                   |
| C-Motech      | CGU-629C      | USB                   |
| C-Motech      | CHU-629S      | USB                   |
| C-Motech      | CMU-301       | USB                   |
| C-Motech      | CNB-680       | USB                   |
| C-Motech      | CNU-550       | USB                   |
| C-Motech      | CNU-680       | USB                   |
| C-Motech      | CNU-680E      | USB                   |

|           |                     |              |
|-----------|---------------------|--------------|
| C-Motech  | D-50                | USB          |
| C-Motech  | U680                | USB          |
| Cricket   | A600                | USB          |
| Datang    | AC901               | USB          |
| Datang    | DTM5731E            | USB          |
| D-Link    | 162R                | USB          |
| D-Link    | DWM-151             | USB          |
| D-Link    | DWM-152             | USB          |
| D-Link    | DWM-152A2           | USB          |
| D-Link    | DWM-152A3           | USB          |
| D-Link    | DWM-152C1           | USB          |
| D-Link    | DWM-155             | USB          |
| D-Link    | DWM-156             | USB          |
| D-Link    | DWM-156A2           | USB          |
| D-Link    | DWM-156A3           | USB          |
| D-Link    | DWM-156C1           | USB          |
| D-Link    | DWM-162             | USB          |
| D-Link    | DWN-162-U5          | USB          |
| D-Link    | DWN-163             | USB          |
| D-Link    | DWM-168             | USB          |
| E-Tel     | ET230U              | USB          |
| EpiValley | SEC-7089            | USB          |
| EpiValley | Model 220           | USB          |
| ESTON     | EST-638U            | USB          |
| FLY Card  | FLY-HU1             | USB          |
| Flyer     | U12                 | USB          |
| Franklin  | CDU-550             | USB          |
| Franklin  | CDU680              | USB          |
| Franklin  | CGU-628A            | USB          |
| Franklin  | CGU-629             | USB          |
| Franklin  | U210                | USB          |
| Giant     | D301                | USB          |
| Haier     | CE100               | USB          |
| Haier     | CE310               | USB          |
| Haier     | CM200               | USB          |
| Haier     | EM100               | USB          |
| Haier     | HT-DM300            | USB          |
| Haier     | WM100               | USB          |
| Haier     | WM200               | USB          |
| Haier     | WM500               | USB          |
| Haier     | VME110              | USB          |
| Haier     | VME200              | USB          |
| Haier     | VMW310              | USB          |
| Hisense   | E6801               | USB          |
| Hojoy     | 733                 | USB          |
| Hojoy     | ET128               | USB          |
| Hojoy     | TD368               | USB          |
| Honest    | UC128               | USB          |
| HTC       | Desire              | Mobile Phone |
| HTC       | Desire HD           | Mobile Phone |
| HTC       | Hero                | Mobile Phone |
| HTC       | Tatto               | Mobile Phone |
| HTC       | T-Mobile myTouch 3G | Mobile Phone |
| Huawei    | D01HW               | USB          |
| Huawei    | D02HW               | USB          |

|        |         |              |
|--------|---------|--------------|
| Huawei | D12HW   | USB          |
| Huawei | D21HW   | USB          |
| Huawei | D22HW   | USB          |
| Huawei | D23HW   | USB          |
| Huawei | D31HW   | USB          |
| Huawei | E1152   | USB          |
| Huawei | E122    | USB          |
| Huawei | E1260   | USB          |
| Huawei | E1261   | USB          |
| Huawei | E1269   | USB          |
| Huawei | E150    | USB          |
| Huawei | E1550   | USB          |
| Huawei | E1552   | USB          |
| Huawei | E1553   | USB          |
| Huawei | E1556   | USB          |
| Huawei | E156G   | USB          |
| Huawei | E160    | USB          |
| Huawei | E160E   | USB          |
| Huawei | E160G   | USB          |
| Huawei | E161    | USB          |
| Huawei | E169    | USB          |
| Huawei | E169U   | USB          |
| Huawei | E170    | USB          |
| Huawei | E172    | USB          |
| Huawei | E173    | USB          |
| Huawei | E173S   | USB          |
| Huawei | E173S-6 | USB          |
| Huawei | E1750   | USB          |
| Huawei | E1756   | USB          |
| Huawei | E176G   | USB          |
| Huawei | E1762   | USB          |
| Huawei | E180    | USB          |
| Huawei | E1820   | USB          |
| Huawei | E182E   | USB          |
| Huawei | E220    | USB          |
| Huawei | E2258   | Mobile Phone |
| Huawei | E226    | USB          |
| Huawei | E270    | USB          |
| Huawei | E352    | USB          |
| Huawei | E398    | USB          |
| Huawei | E510    | USB          |
| Huawei | EC122   | USB          |
| Huawei | EC1260  | USB          |
| Huawei | EC1261  | USB          |
| Huawei | EC167   | USB          |
| Huawei | EC168   | USB          |
| Huawei | EC169   | USB          |
| Huawei | EC189   | USB          |
| Huawei | EC226   | USB          |
| Huawei | EC228   | USB          |
| Huawei | ET128   | USB          |
| Huawei | K3520   | USB          |
| Huawei | K3565   | USB          |
| Huawei | K3715   | USB          |
| Huawei | K3765   | USB          |

|             |                |              |
|-------------|----------------|--------------|
| Huawei      | UGM181         | USB          |
| Imperial    | CPB7.0         | USB          |
| IPWireless  | IPWireless USB | USB          |
| JOA Telecom | LM-700r        | USB          |
| KPT         | WM66           | USB          |
| Kyocera     | UTU1900D       | USB          |
| Lenovo      | SPRD-8800      | USB          |
| LG          | HDM-2100       | USB          |
| LG          | L-05A          | USB          |
| LG          | LUU-2100TI     | USB          |
| LG          | P500           | Mobile Phone |
| LightSpeed  | EDGE-180M      | USB          |
| LightSpeed  | HSDPA-180C     | USB          |
| LightSpeed  | HSUPA-380P     | USB          |
| LongCheer   | 71_11          | USB          |
| LongCheer   | C01LC          | USB          |
| LongCheer   | C02LC          | USB          |
| LongCheer   | D11LC          | USB          |
| LongCheer   | D12LC          | USB          |
| LongCheer   | D21LC          | USB          |
| Matrix      | MTX-H25        | USB          |
| Maxon       | USB3-8521      | USB          |
| MLW Telecom | SU-3200U       | USB          |
| MLW Telecom | SU-6200N       | USB          |
| MLW Telecom | SU-6200U       | USB          |
| MLW Telecom | SU-6380U       | USB          |
| MLW Telecom | SU-6500U       | USB          |
| MLW Telecom | SU-6600U       | USB          |
| MLW Telecom | SU-6800U       | USB          |
| MLW Telecom | SU-7000U       | USB          |
| MLW Telecom | SU-8000U       | USB          |
| MLW Telecom | SU-8100U       | USB          |
| MLW Telecom | SU-8200U       | USB          |
| MLW Telecom | SU-8300U       | USB          |
| MLW Telecom | SU-8500U       | USB          |
| MLW Telecom | SU-8600U       | USB          |
| MLW Telecom | SU-8650U       | USB          |
| MLW Telecom | SU-9000U       | USB          |
| MLW Telecom | SU-9300U       | USB          |
| MLW Telecom | SU-9500U       | USB          |
| Motorola    | Q9             | Mobile Phone |
| MTC         | FLY-HU01       | USB          |
| Nokia       | 5800 Express   | Mobile Phone |
| Nokia       | 6214C          | Mobile Phone |
| Nokia       | CS-10          | USB          |
| Nokia       | CS-15          | USB          |
| Nokia       | CS-17          | USB          |
| Nokia       | CS-18          | USB          |
| Nokia       | CS-19          | USB          |
| Nokia       | E61            | Mobile Phone |
| Nokia       | N73            | Mobile Phone |
| Nokia       | N78            | Mobile Phone |
| Nokia       | N95            | Mobile Phone |
| Novatel     | ES720          | USB          |
| Novatel     | EU850D         | USB          |

|            |               |              |
|------------|---------------|--------------|
| Novatel    | MC727         | USB          |
| Novatel    | MC760         | USB          |
| Novatel    | MC930D        | USB          |
| Novatel    | MC935D        | USB          |
| Novatel    | MC950D        | USB          |
| Novatel    | MC990D        | USB          |
| Novatel    | MC998         | USB          |
| Novatel    | MiFi2352      | USB          |
| Novatel    | U720          | USB          |
| Novatel    | U727          | USB          |
| Novatel    | U760          | USB          |
| NTT Docomo | L-05A         | USB          |
| Olivetti   | Olicard 145   | USB          |
| ONDA       | DT515HS       | USB          |
| ONDA       | MSA405HS      | USB          |
| ONDA       | MSA501HS      | USB          |
| Option     | GI0322        | USB          |
| Option     | GTM378/GI0201 | USB          |
| Option     | GTM382        | USB          |
| Option     | ICON 031      | USB          |
| Option     | ICON 225      | USB          |
| Option     | ICON 322      | USB          |
| Option     | ICON 401      | USB          |
| Option     | ICON 431      | USB          |
| Option     | ICON 451      | USB          |
| Option     | ICON 452      | USB          |
| Option     | ICON 505      | USB          |
| Option     | ICON 515      | USB          |
| Option     | HSUPA-380P    | USB          |
| Pantech    | UM150         | USB          |
| Pantech    | UM175         | USB          |
| Pantech    | UM185AL       | USB          |
| Pantech    | UM185C        | USB          |
| Pantech    | UMW190VW      | USB          |
| Pantech    | UML290VW      | USB          |
| Pinsu      | EU930         | USB          |
| Prolink    | PHS-100       | USB          |
| Prolink    | PHS-300       | USB          |
| Promate    | E-G03         | USB          |
| Quanta     | GKD           | USB          |
| Quanta     | GQR           | USB          |
| Quanta     | MU-Q101       | USB          |
| Quanta     | Q110          | USB          |
| QuickTel   | HM405         | USB          |
| Qsida      | H21           | USB          |
| Samsung    | I9000         | Mobile Phone |
| Samsung    | SGH-H128      | USB          |
| Samsung    | SCH-U209      | USB          |
| Samsung    | Z800          | USB          |
| Samsung    | Nexus S       | Mobile Phone |
| SHber      | E750          | USB          |
| SHber      | E751          | USB          |
| SHber      | E751+         | USB          |
| SHber      | E752          | USB          |
| SHber      | E753+         | USB          |

|                 |              |              |
|-----------------|--------------|--------------|
| SHber           | H951         | USB          |
| SHber           | H955         | USB          |
| SHber           | H956         | USB          |
| Sierra Wireless | 595U         | USB          |
| Sierra Wireless | 598U         | USB          |
| Sierra Wireless | 875U         | USB          |
| Sierra Wireless | AC595U       | USB          |
| Sierra Wireless | AC597        | USB          |
| Sierra Wireless | AC597U       | USB          |
| Sierra Wireless | AC875U       | USB          |
| Sierra Wireless | AC881U       | USB          |
| Sierra Wireless | AC885        | USB          |
| Sierra Wireless | C885U        | USB          |
| Sierra Wireless | Compass 597  | USB          |
| Sierra Wireless | Compass 885U | USB          |
| Sierra Wireless | Compass 888U | USB          |
| Sierra Wireless | Compass 889  | USB          |
| Sierra Wireless | USB305       | USB          |
| Sierra Wireless | USB306       | USB          |
| Sierra Wireless | USB307       | USB          |
| Sierra Wireless | USB308       | USB          |
| Sierra Wireless | USB309       | USB          |
| SIMCOM          | SIM5218A     | USB          |
| SIMCOM          | U6-T         | USB          |
| SIMCOM          | U9R-T        | USB          |
| Solomon         | D12LC        | USB          |
| Solomon         | S3GM-646     | USB          |
| Solomon         | S3GM-660     | USB          |
| Solomon         | S3GM-690     | USB          |
| Solomon         | SEGM-520C    | USB          |
| Sony Ericsson   | J108i        | Mobile Phone |
| Sony Ericsson   | MD300        | USB          |
| Sony Ericsson   | MD400        | USB          |
| Sprint          | U598         | USB          |
| Sprint          | U760         | USB          |
| T&W             | W1U100       | USB          |
| Tacito          | MD72U        | USB          |
| Telit           | UC864        | USB          |
| TEracomm        | LW272        | USB          |
| TEracomm        | LW273        | USB          |
| UTSTARCOM       | C6805        | USB          |
| UTStarcom       | CU186        | USB          |
| UTStarcom       | CU189(Q6085) | USB          |
| UTStarcom       | UM100        | USB          |
| Verizon         | ES720        | USB          |
| Verizon         | UM150VW      | USB          |
| Verizon         | UM175A       | USB          |
| Verizon         | UM175B/VW    | USB          |
| Vodafone        | EasyBox      | USB          |
| Vodafone        | K3805-Z      | USB          |
| Vodafone        | K3806-Z      | USB          |
| Vodafone        | K4505        | USB          |
| Vtion           | V1810        | USB          |
| Vtion           | E1916        | USB          |
| Vtion           | U1916        | USB          |

| Webee      | Modem Configuration | USB |
|------------|---------------------|-----|
| Wetelecom  | WMD-200A            | USB |
| Withtelcom | WMU-100A            | USB |
| ZOOM       | 4593                | USB |
| ZOOM       | 4595                | USB |
| ZOOM       | 72TRI               | USB |
| ZTE        | AC2710              | USB |
| ZTE        | AC2726              | USB |
| ZTE        | AC2736              | USB |
| ZTE        | AC2766              | USB |
| ZTE        | AC560               | USB |
| ZTE        | AC580               | USB |
| ZTE        | AC8710              | USB |
| ZTE        | K3520               | USB |
| ZTE        | K3565-Z             | USB |
| ZTE        | K3765-Z             | USB |
| ZTE        | MF100               | USB |
| ZTE        | MF102D              | USB |
| ZTE        | MF110               | USB |
| ZTE        | MF112               | USB |
| ZTE        | MF180               | USB |
| ZTE        | MF620               | USB |
| ZTE        | MF622               | USB |
| ZTE        | MF626               | USB |
| ZTE        | MF627               | USB |
| ZTE        | MF628               | USB |
| ZTE        | MF633               | USB |
| ZTE        | MF633BP             | USB |
| ZTE        | MF636               | USB |
| ZTE        | MF636+              | USB |
| ZTE        | MF636-BKIC          | USB |
| ZTE        | MF636BP             | USB |
| ZTE        | MF637               | USB |
| ZTE        | MF637U              | USB |
| ZTE        | MF645               | USB |
| ZTE        | MG478               | USB |
| ZTE        | MF668               | USB |
| ZTE        | MG880               | USB |
| ZTE        | MU-318              | USB |
| ZTE        | MU-350              | USB |
| ZTE        | MU-351              | USB |